


MPC Board Reset

On occasion it may be necessary to reset the MPC board, due to a programming glitch, chip replacement, or other indeterminate fault. Serious damage may occur if instructions are not followed properly.

1. Start system and record the system parameters in MPC Board's memory. Press and hold 'Stop' and 'Alarm/Display' buttons on the remote display simultaneously and continuously for 4 seconds to enter 'Program Mode'. Press 'Alarm/Display' to scroll through the menus, recording each setting as you go.
2. Remove power to the MPC Board
3. Place a jumper across the jp5 terminals in the middle of the MPC Board. You may need to move some of the cables around to access the JP-5 Jumper pins. You can 'borrow' a jumper from JP-1 or JP-2 if a jumper is not available. See photo below
4. Turn power back on to the MPC Board. You should see a series of displays and flashes. Once the display stabilizes turn power off. This may take up to 2 minutes.
5. Move the jumpers back to their original position.
6. Turn power to the MPC board back on and bypass the purge mode by pressing the 'Stop' and 'Auto Run' buttons (just for a moment) on the display simultaneously.
7. Access the 'Program Mode' on the remote display (see Step 1). If the MPC reset was effective the settings will have changed back to the factory default settings.
8. When in the program mode use the Autorun, Autostore, and Stop button (flow constant only) to re-enter your original programming settings. Wait 45 seconds for the programming mode to time out and save the settings

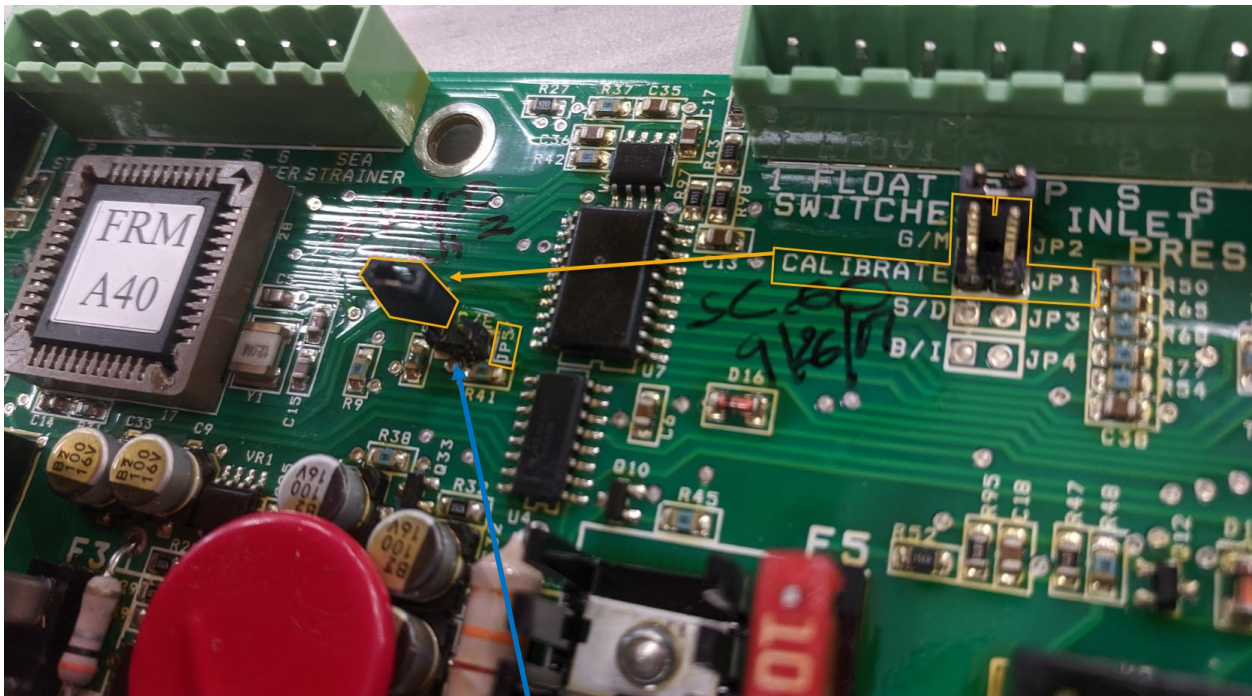

JP-5 Jumper